



CANTILEVER RACKING







Installation Manual



SUPER RACK



Cantilever Racking – Installation Guide

A		Brace Attachment
B		Bolt Assembly 10cm x 2cm
C		Bolt Assembly 2.5cm x 1.5cm
D		Bolt Assembly 5cm x 3.5cm
E		Arm Rod + Rod Pin 12.5cm x 3cm
F		Wedge Anchor



sales@superrack.com.au

1300 884 482



- (1) Straight Brace
- (2) Diagonal Brace

** All bracing starts at 60cm from top of base **



sales@superrack.com.au

1300 884 482


Instructions:

1. Attach upright to base using 12 x (D) bolt assemblies.





2. Stand upright / base combo up
3. Attach (A) Brace attachment to tower starting at 60cm using (C) Bolt assemblies.

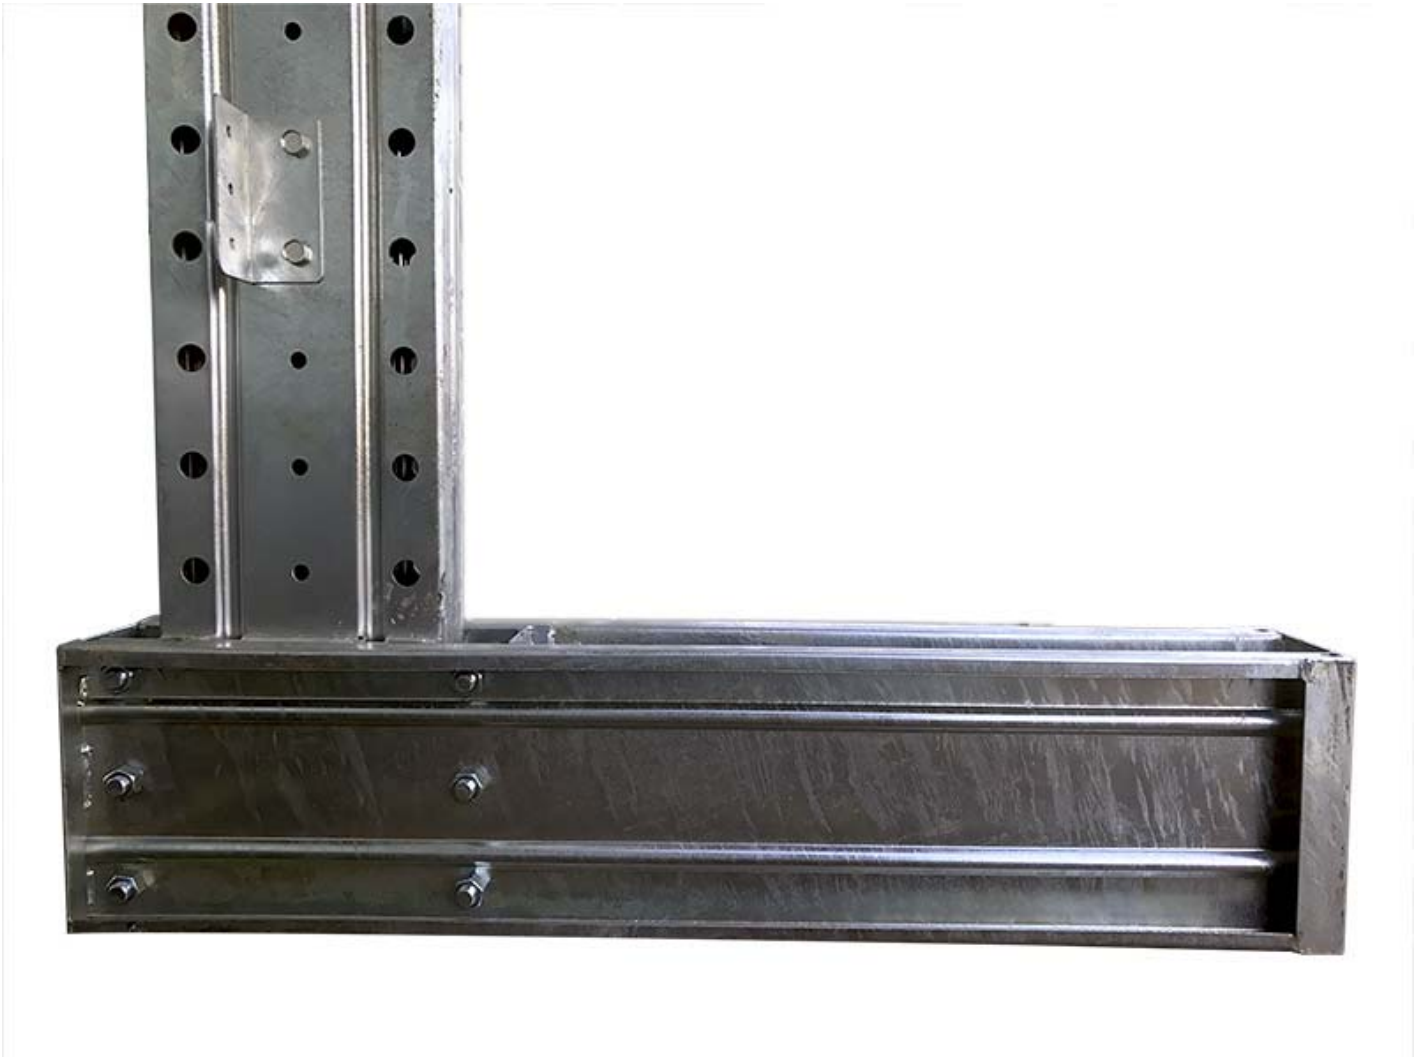



sales@superrack.com.au


1300 884 482

4. Attach Straight brace along with angle brace using (B) Bolt assembly. Repeat step for each tower.





5. Secure bases to the floor using (D) wedge anchors in bottom holes of bases.
6. Attach arms using (E) Arm rod and secure with Arm Pin.

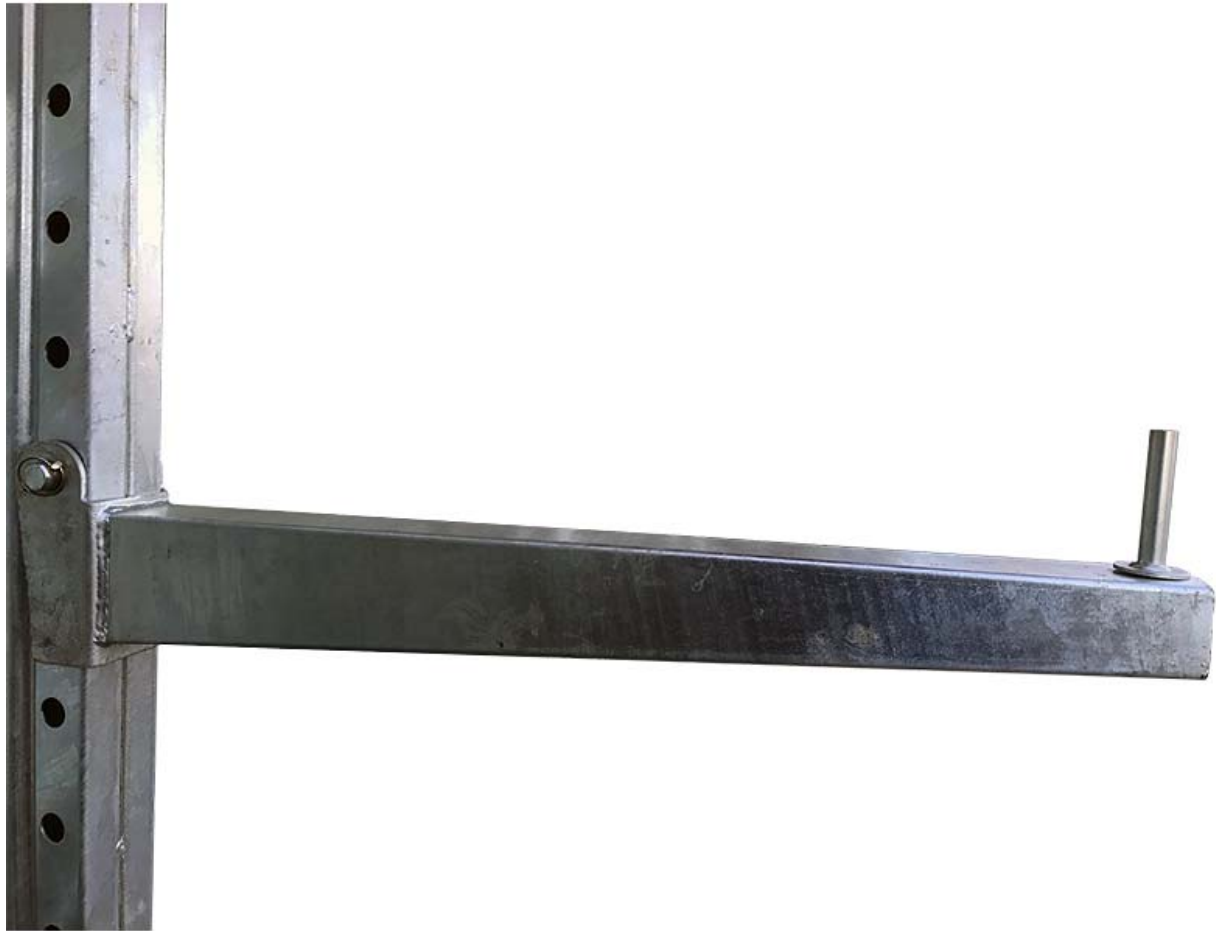



sales@superrack.com.au

1300 884 482

